

EVERSAN

www.eversan.com

MODEL 9500



TABLETOP SCOREBOARD

Instruction Manual

Address: 34 Main Street, Whitesboro, NY 13492

Phone: 315-736-3967 • Toll Free: 800-383-6060 • Fax: 315-736-4058

SCOREBOARDS • TIMERS • MESSAGE SIGNS • VIDEO DISPLAYS • WIRELESS



Page 1

**MODEL 9500
PORTABLE L.E.D. SCOREBOARD**

THE MODEL 9500 CONSISTS OF:

- Model 9500 Scoreboard
- Control Console (Stored in the side of the unit)
- 25 Feet of Control Cable (Attached to Control Console)

CUSTOMER SHIPPING INSPECTION

- A. Unpack scoreboard (save boxes)
- B. Remove the control console and control cable from the side of the scoreboard.
- C. Plug the scoreboard into a standard 120VAC outlet. The scoreboard will go through a diagnostic check out by displaying an 8 in each number location and the going blank. When the 8's finish walking through the display zero's will be displayed in the Home and Guest score and the time location. You are now ready to operate the scoreboard.
- D. If the scoreboard fails to complete its diagnostics checkout disconnect it from the 120VAC outlet, wait 30 seconds and try again. If the scoreboard still fails call (800)383-6060 for assistance.

NOTE: If there is any malfunction or shipping damage, notify the shipper and Eversan, Inc. immediately.

Operating Instructions

9500 SCOREBOARD

1. At this time, you may set any function:
 - A. Place the **SET/ RUN** rocker switch, located on top of the control console, to **SET** and the **STOP/ GO** switch to **STOP**.
 - B. Press the **GUEST, HOME, PERIOD, MINUTE** or **SECONDS** to increment. Hold down the button to decrement fast.
 - C. To start clock, place **SET/ RUN** to **RUN** and **STOP/ GO** to **GO**.
 - D. To stop the clock, place **STOP/GO** to **STOP**.
 - E. The Home and Guest BONUS along with the POSSESSION indicator are controlled using the rocker switches.
 - F. When time is running, only the **GUEST** and **HOME** scores can be incremented. (PERIOD and TIME can only be changed in SET mode).
 - G. UP/DOWN function – to change counting mode for the clock:
 1. Place **SET/ RUN** to **SET** and **STOP/GO** to **STOP**.
 2. Push the **HORN** and **PERIOD** buttons at the same time.
 3. Place **SET/ RUN** switch to **RUN**.
 4. Place **STOP/ GO** switch to **GO**.

NOTE: If the scoreboard checks out 8's and fails to perform, unplug the scoreboard and return to step 1 of operating Instructions. If the problem persists, contact an EVERSAN, Inc. technician at (800) 383-6060 for immediate assistance.



www.eversan.com

MODEL 9500

**TABLETOP
SCOREBOARD**

Address: 34 Main Street, Whitesboro, NY 13492

Phone: 315-736-3967 • **Toll Free:** 800-383-6060 • **Fax:** 315-736-4058

SCOREBOARDS • TIMERS • MESSAGE SIGNS • VIDEO DISPLAYS • WIRELESS