



www.eversan.com

MODEL 2012-2016



**Wireless
Basketball Shot Clock**

Instruction Manual

Address: 34 Main Street, Whitesboro, NY 13492

Phone: 315-736-3967 • **Toll Free:** 800-383-6060 • **Fax:** 315-736-4058

SCOREBOARDS • TIMERS • MESSAGE SIGNS • VIDEO DISPLAYS • WIRELESS

Table of Contents

Operating Instructions 1

Console Operation..... 2

Segment Front View 3



Page 1

**Eversan, Inc.
Model 2012/2016 L.E.D.
Wireless
Basketball Shot Clock**

OPERATING INSTRUCTIONS

Power Requirements:

Each display unit requires 120VAC @ 1 AMP on a clean circuit breaker (max. 10 amps).

Power Up Sequence:

1. Antenna must be attached to each display and control console.
2. Power up both displays using a standard 120VAC outlet. Upon power up the displays will have the center segment of each digit illuminated. **You must always power up the displays prior to the control console for proper radio communication.**
3. Plug the 9-volt adapter into a standard outlet and into the control console. Turn the control console on and the displays will perform a diagnostic procedure by displaying eights in each position and then setting to 35 seconds.

NOTE: The Power Switch is located in the front corner on the left side panel of the console.

CONSOLE OPERATING INSTRUCTIONS:

SET:

Pressing this button, when the STOP/GO switch is in the stop position, allows the user to change the default of the master shot timer from 35 seconds. Holding the button down causes the timer to decrement the default time and tapping the button causes the time to increment by 1 second.

RESET:

Pressing this button selects the master shot clock time and resets the clock to the pre-set time, i.e. 35 seconds.

AUX SET:

Pressing this button allows the user to change the default time on the auxiliary shot clock time 35 seconds. Holding the button down causes the auxiliary shot clock time to decrement the default time and tapping the button causes the time to increment by 1 second.


AUX RESET:

Pressing this button selects the auxiliary shot clock time and resets the clock to the pre-set time, i.e. 16 seconds.


STOP/ GO:

This starts and stops the timer when counting down. This switch must be in STOP to change the value of the time to be set on the timer.

(Segment Front View)

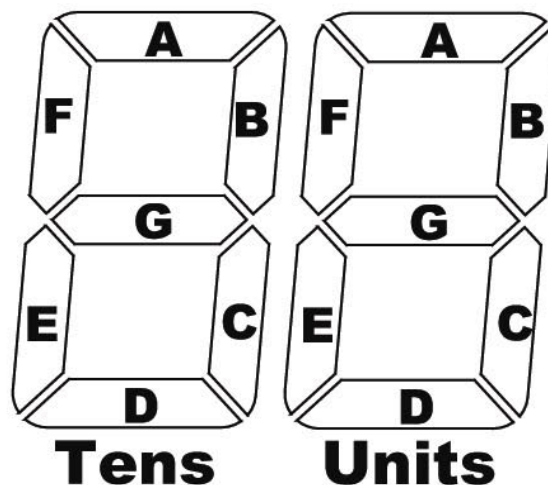

MODEL 2012-16
2.4GHz Wireless
Control Console

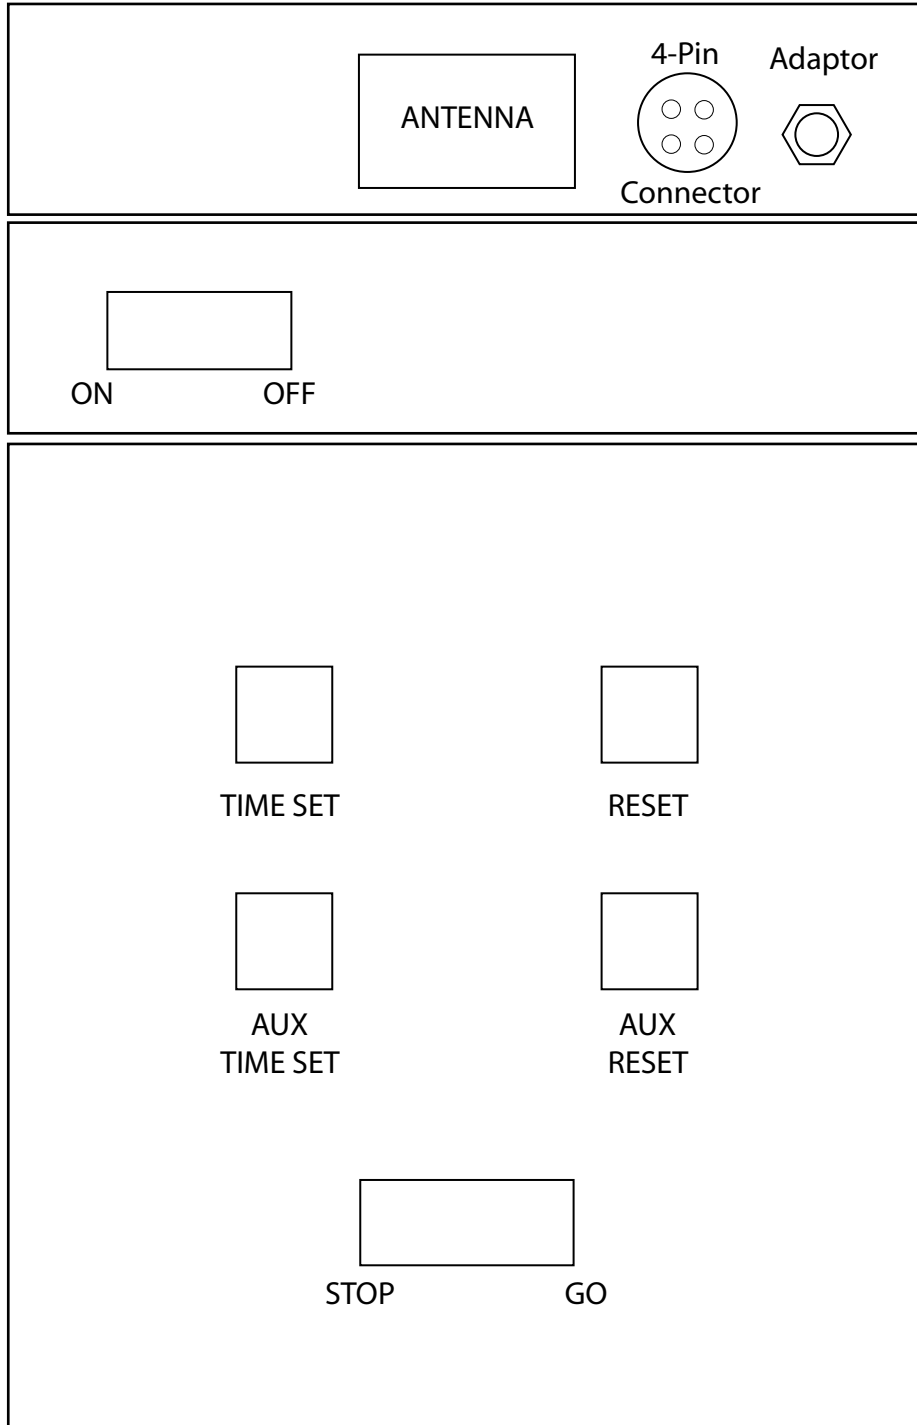



www.eversan.com

**MODEL 2012-2016
Basketball Shot Clock**

Address: 34 Main Street, Whitesboro, NY 13492

Phone: 315-736-3967 • **Toll Free:** 800-383-6060 • **Fax:** 315-736-4058

SCOREBOARDS • TIMERS • MESSAGE SIGNS • VIDEO DISPLAYS • WIRELESS