



**MODEL 9720**  
**SHOT CLOCK W/ TIMER**



**OPERATING INSTRUCTIONS**

**SETTING THE SHOT TIMER OPTION:**

To activate this option, the remote RESET switch must be purchased. Connect this switch into the connector on the console.

*To run the shot timer:*

1. Pressing the **START/STOP TIME** button on the console will start and stop the shot clock time
2. Pressing the remote switch will RESET the shot timer.

**CHANGING THE SHOT TIMER RESET TIME (FULL GAME):**

Game TIME must be greater than SHOT CLOCK time in order for shot timer to display. The Eversan shot time has a default time of 35 seconds. The shot time can be changed to any number 0-99 but will reset to 35 seconds when the scoreboard console is powered down. To change the reset time for the shot timer, press STOP, push the REMOTE RESET button and hold it down, then press the SHOT CLOCK button once, then enter a two digit shot clock time. Once you have set the shot clock time, it will always reset to that time when the REMOTE RESET button is pressed, unless the scoreboard is powered down.

**CHANGING THE SHOT TIMER RESET TIME (1 Possession Change):**

The shot time can be changed to any number 0-99 but will reset to 35 seconds when the scoreboard console is powered down or RESET button is pressed. To change the shotclock time for one possession, press STOP, push the REMOTE RESET button, then press the SHOT CLOCK button once, then enter a two digit shot clock time. pressing the RESET switch will reset normal shot clock time.