



9360 INSTALLATION INSTRUCTIONS


STEP 1:
SET I-BEAMS 10 FOOT APART ON CENTER.

STEP 2:
MOUNT BOTTOM Z-BRACKETS A MINIMUM OF 8' ABOVE GROUND LEVEL.
WELD OR BOLT BRACKETS TO I-BEAMS A MINIMUM OF 8'-3-1/4" FROM THE
TOP OF THE I-BEAM (IF NO AD/SPONSOR PANEL).

STEP 3: LIFT SCOREBOARD, USING PROPER RIGGING, INTO BOTTOM Z-BRACKET
AND SECURE WITH A TEMPORARY CLAMP.

STEP 4: BOLT OR WELD TOP Z-BRACKETS TO HOLD SCOREBOARD INTO PLACE.

DETAIL A

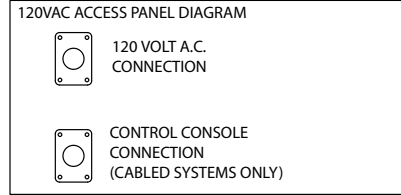

NOTE: ALL DIMS. FOR SCOREBOARD ONLY. IF OPTIONAL AD/SPONSOR PANEL IS PURCHASED MAKE CORRECT ADJUSTMENTS.

