
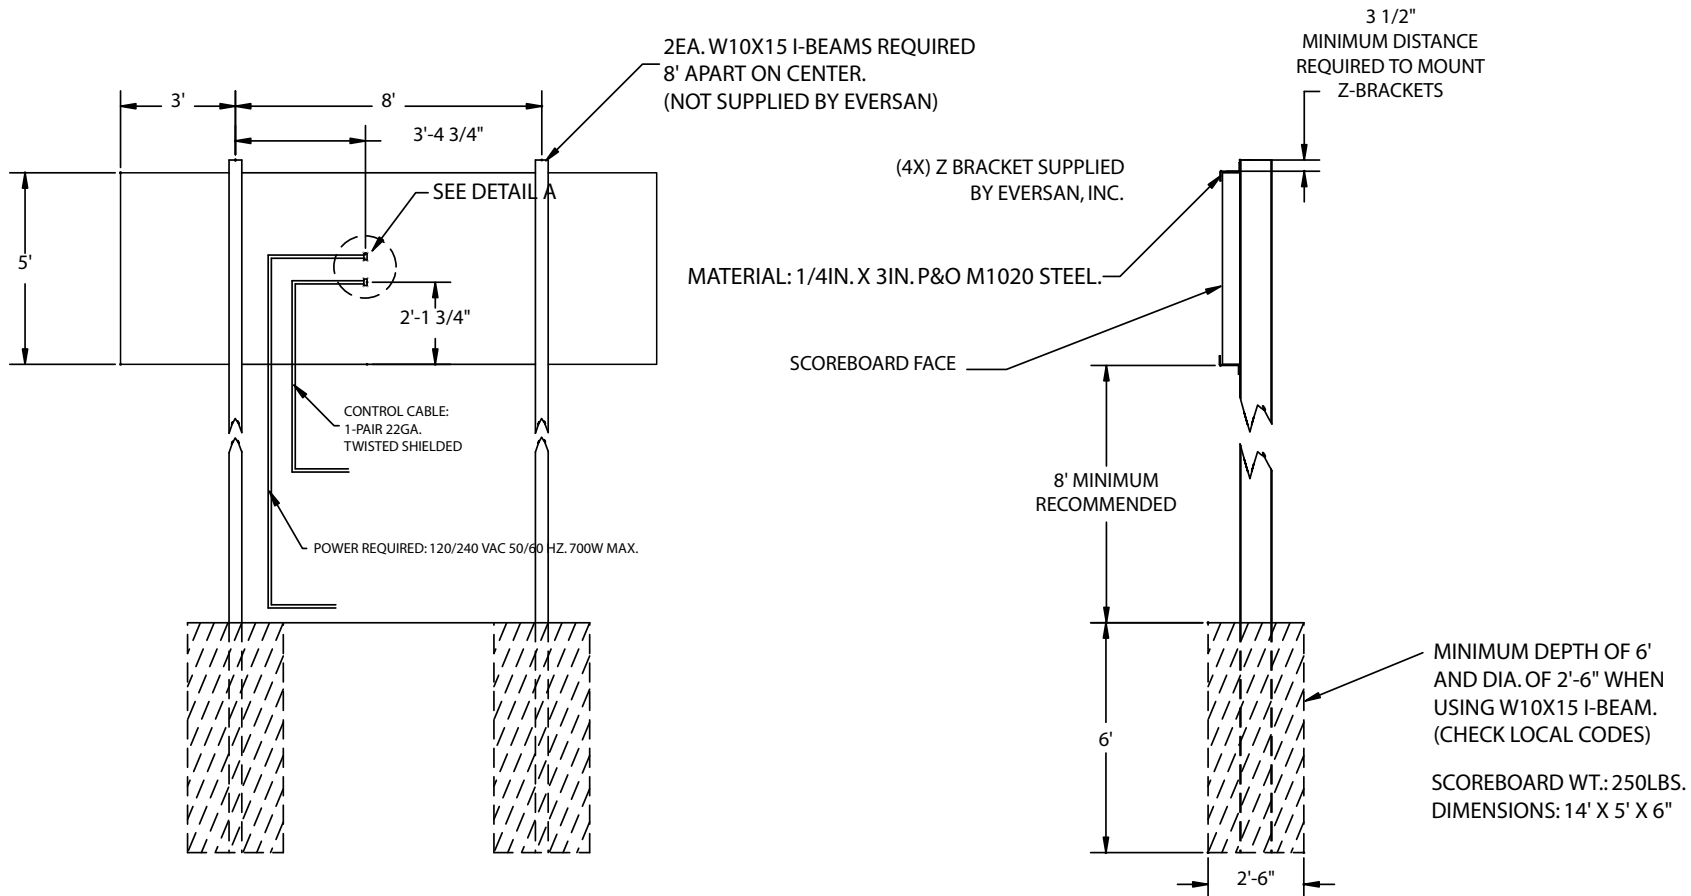


# TYPICAL INSTALLATION OF MODEL 9275

1. SET I BEAM AT PROPER LOCATIONS.
2. LOCATE, ON I BEAMS, WHERE THE BOTTOM OF SCORE BOARD WILL BE AND MOUNT BOTTOM Z BRACKETS. EITHER BOLT Z BRACKET TO I BEAM OR WELD Z BRACKET TO I BEAM.
3. LIFT SCORE BOARD AND OPTIONAL SPONSER PANEL INTO Z BRACKETS, CHECK FOR LEVEL AND SECURE WITH TOP BRACKETS.

## DETAIL A

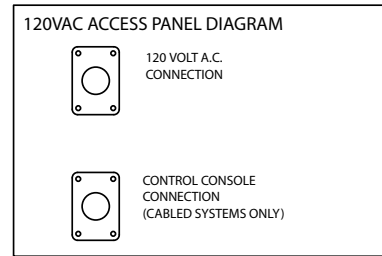

NOTE: ALL DRAWINGS ARE FOR SCOREBOARD ONLY.  
ADJUST SIZE AND LENGTH OF I-BEAMS IF OPTIONAL  
SPONSER PANEL IS PURCHASED.

