
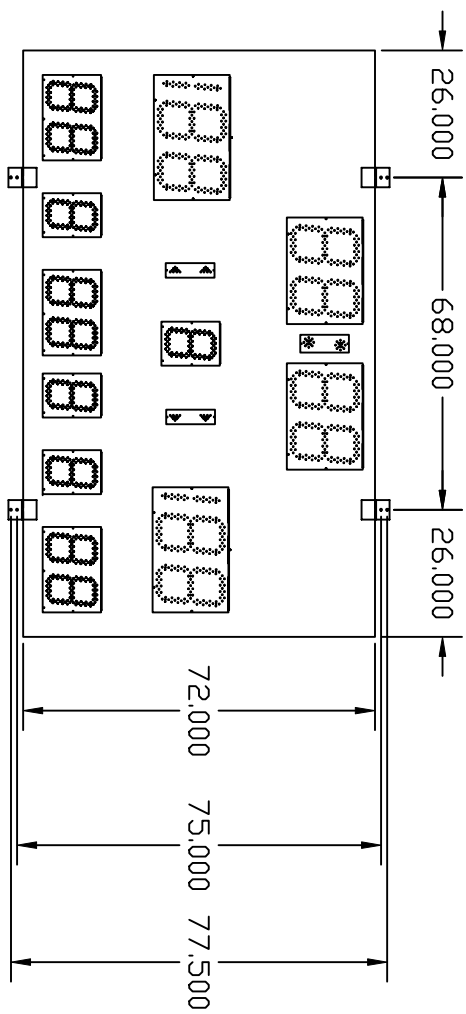
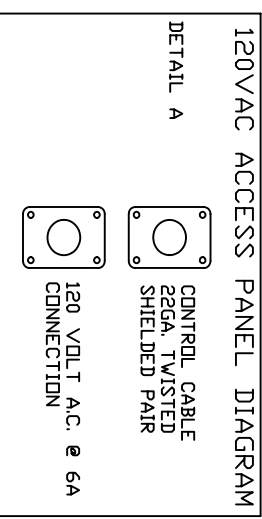


6755 INDOOR INSTALLATION

1. MOUNT TWO BOTTOM Z-BRACKETS USING CORRECT HARDWARE FOR THE WALL TYPE IN USE. EACH BRACKET HAS TWO 7/16" DIA. HOLES. 3/8" DIA. BOLTS SHOULD BE USED TO SECURE BRACKETS 68IN. APART ON CENTER. BE SURE BRACKETS ARE LEVEL AND IN LINE WITH EACH OTHER.
2. MEASURE UP 72 1/2" FROM THE FLAT PART OF THE BOTTOM Z-BRACKET (WHERE THE SCOREBOARD WILL SIT). THIS IS WHERE THE TOP Z-BRACKET WILL MEET THE SCOREBOARD. MOUNTING HOLES FOR THE TOP BRACKETS WILL 75" BETWEEN THE INSIDE HOLES AND 77.5" BETWEEN THE OUTSIDE HOLES. DRILL THE TOP Z-BRACKET MOUNTING HOLES 68" APART ON CENTER.
3. LIFT SCOREBOARD INTO BOTTOM Z-BRACKETS, USING SAFE LIFTING TECHNIQUES, AND SECURE WITH THE TOP-Z-BRACKETS.

SIDE VIEW

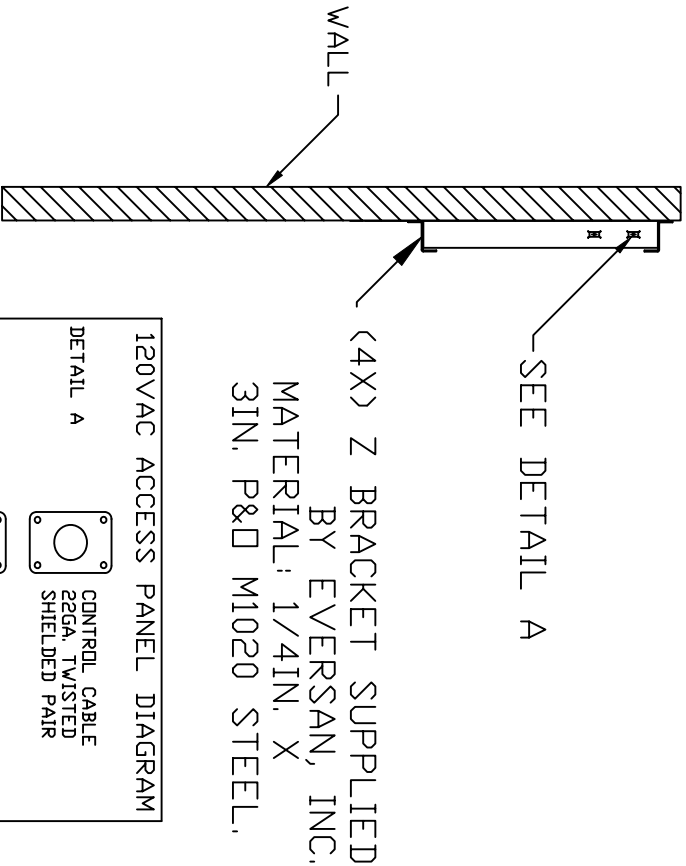

SCOREBOARD SPECIFICATIONS:
 DIMENSIONS: 6FT H X 10FT L X 6IN D
 WEIGHT: 200LBS
 ELECTRICAL REQUIREMENT: 120VAC AT 6AMP
 DATA CABLE: 1-22GA TWISTED SHIELDED PAIR

