


## TYPICAL INSTALLATION FOR MODEL 9007/9008

1. SET I BEAM AT PROPER LOCATIONS.
2. LOCATE, ON I BEAMS, WHERE THE BOTTOM OF SCORE BOARD WILL BE AND MOUNT BOTTOM Z BRACKETS. EITHER BOLT Z BRACKET TO I BEAM OR WELD Z BRACKET TO I BEAM.
3. LIFT SCORE BOARD AND ATTACHED SPONSER PANEL (OPTIONAL) INTO Z BRACKETS, CHECK FOR LEVEL AND SECURE WITH TOP BRACKETS.



NOTE: ALL DIMENSIONS GIVEN FOR SCOREBOARD ONLY, MAKE APPROPRIATE ADJUSTMENTS FOR SPONSER PANEL.

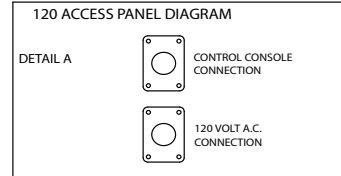