
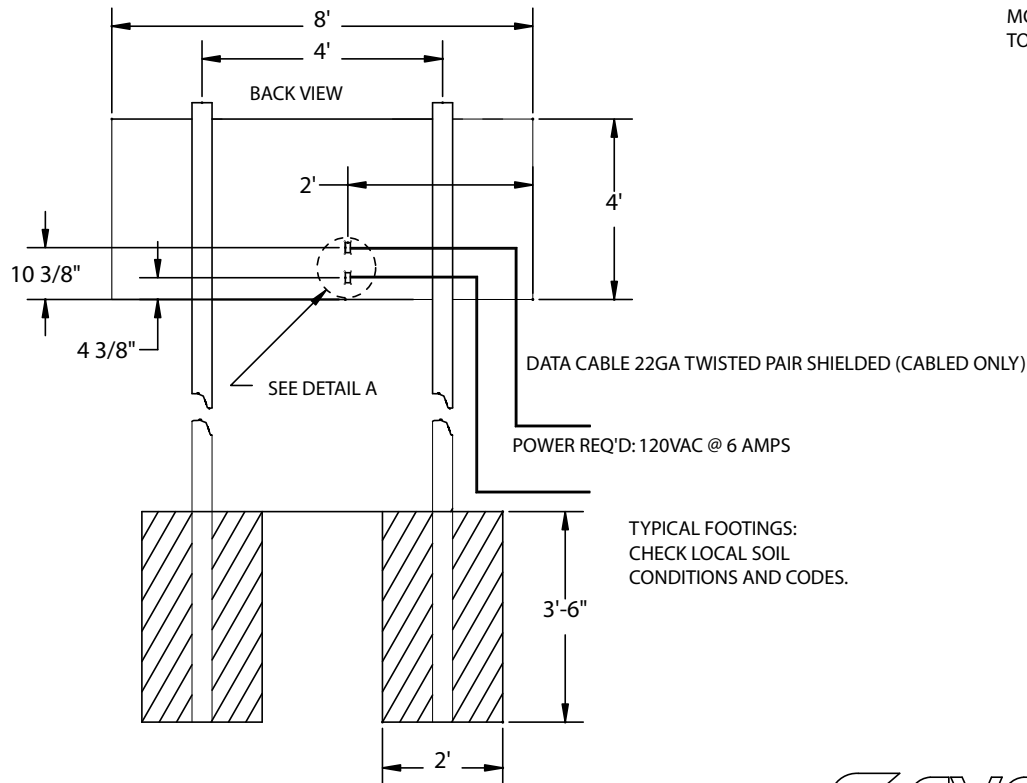


TYPICAL INSTALLATION FOR MODEL 9200

1. SET I BEAM AT PROPER LOCATIONS.
2. LOCATE, ON I BEAMS, WHERE THE BOTTOM OF SCORE BOARD WILL BE AND MOUNT BOTTOM Z BRACKETS. EITHER BOLT Z BRACKET TO I BEAM OR WELD Z BRACKET TO I BEAM.
3. LIFT SCORE BOARD AND ATTACHED SPONSER PANEL (OPTIONAL) INTO Z BRACKETS, CHECK FOR LEVEL AND SECURE WITH TOP BRACKETS.

NOTE: ALL DIMENSIONS GIVEN FOR SCOREBOARD ONLY, MAKE APPROPRIATE ADJUSTMENTS FOR SPONSER PANEL.

MINIMUM W4 X 13 I BEAM (ASTM A36)
 4FT. APART ON CENTER.
 SCORE BOARD WT. APPROX. 85LBS.

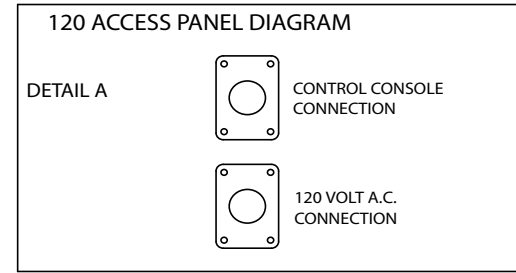

4 EA. Z-BRACKETS SUPPLIED.
 MOUNT TOP OF SCOREBOARD 4 IN. BELOW TOP OF I-BEAM FOR BRACKET CLEARANCE.

