


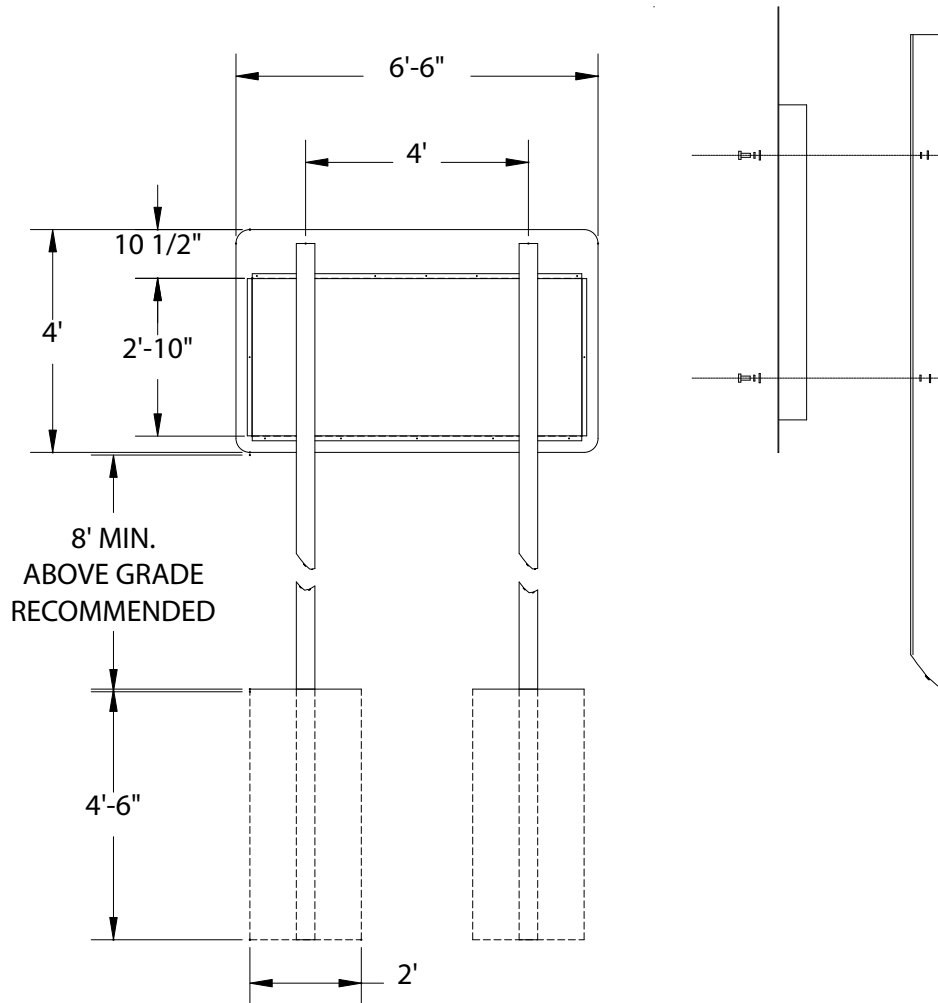

REAR VIEW OF 9400 I-BEAM INSTALLATION



INSTALLATION:

1. INSTALL POSTS 4' APART, MINIMUM POST SIZE RECOMMENDED IS EITHER 4" X 4" TREATED LUMBER POST OR A W8X10 I-BEAM.

2. REMOVE THE TENS OF MINUTES, UNITS OF SECONDS, HOME AND GUEST SCORE DIGIT MODULES PER REMOVAL INSTRUCTIONS.
DRILL HOLES THROUGH THE BACK OF THE SCOREBOARD THAT WILL ALIGN WITH THE POSTS.

3. SECURE THE BOARD TO THE POSTS BY:

A. INSTALL 3 INCH LONG LAG BOLTS WITH A LOCK WASHER AND ONE INCH DIAMETER FLAT WASHERS IN EACH HOLE FOR WOODEN POSTS.

B. DRILL CORRESPONDING HOLES IN THE METAL I-BEAMS AND SECURE SCOREBOARD WITH 5/16" BOLTS, NUTS, WASHERS AND LOCK WASHERS.