

EVERSAN

www.eversan.com

MODEL 9382A



ALL SPORT INTERVAL TIMER

Instruction Manual

Address: 34 Main Street, Whitesboro, NY 13492

Phone: 315-736-3967 • **Toll Free:** 800-383-6060 • **Fax:** 315-736-4058

SCOREBOARDS • TIMERS • MESSAGE SIGNS • VIDEO DISPLAYS • WIRELESS

Table of Contents

Check List	1
Operating Instructions.....	2
Cabled Console	3
Wireless Console	4
Model 812V Battery Operation (optional).....	5



**MODEL 9382A
ALL SPORT INTERVAL TIMER
INSTRUCTIONS**

These instructions must be followed to ensure correct operation. The warranty will be considered null and void if inspection and operating procedures are disregarded.

Should you require assistance or have any questions, please call 1-800-383-6060.

The Eversan, Inc. scoreboard is a microprocessor-controlled device requiring very low power, fewer than 3 amps at 12V DC (Battery Operation) or standard 110VAC.

OPTIONS FOR THE MODEL 9382A:

- 12 Volt Battery Operation
- 220 volt AC power (Foreign)
- Cabled Remote Control Console (Optional)

Customer Shipping Inspection

- A. Unpack the timer (save boxes)
- B. Unpack control cable and console, if ordered. (save boxes)

NOTE:

Prior to use, the timer should be tested for shipping damage as follows:

1. Stand the board upright and plug the console cable and console into the console connector on the timer, if required.
2. Connect the 30 Watt self-contained siren by plugging the two pin connector into the upper left side of the display and using the six 6-32 screws to secure the siren to the top of the unit.
3. Plug the power cord into a 120 VAC standard outlet.
4. If the board is working correctly the digits will go through a diagnostic by showing 8 and then going blank. The horn will then sound a zero will be displayed.

See Operating Instructions to determine functions

NOTE:

If there is any malfunction or shipping damage, notify the shipper and Eversan, Inc. Immediately.

OPERATING INSTRUCTIONS


The Model 9382A Workout Timer allows you to set a 1-99 minute workout time with a 1-99 second rest time that will automatically reset up to 99 times. While operating it will count-up the number of the period that is active.

Setting the Display

1. Place the **STOP/GO** rocker switch to **STOP**.
2. Using the thumb wheel switch dial the number of minutes you want the workout period to last. Push and release the **MINUTES** push button switch. The number showing on the thumb wheel switch will now show on the display.
3. Using the thumb wheel switch dial the number of workout periods you wish to complete. Push and release the **PERIOD** push button switch. The number showing on the thumb wheel will now show on the display.
4. Using the thumb wheel switch dial the number of seconds you want your rest period, between workout periods, to be. Push and release the **PAUSE** push button switch. The number showing on the thumb wheel will now show on the display.
5. Place the **STOP/ GO** switch to **GO**. The horn will sound and the display will show the number one, you are in workout period 1, while the internal clock counts down the time in the period. When the internal clock counts to zero time the horn will sound indicating the rest period has started.
6. When the rest period is over the horn will sound and the display will show the number 2. This will continue until the last period has run out. At the end of the last period the horn will pulsate to indicate the end of the last period.

HINT: The 9382A has default values of 5 Minutes, 25 Periods and 5 second rest period between workout periods.

9382A Cabled Control Console

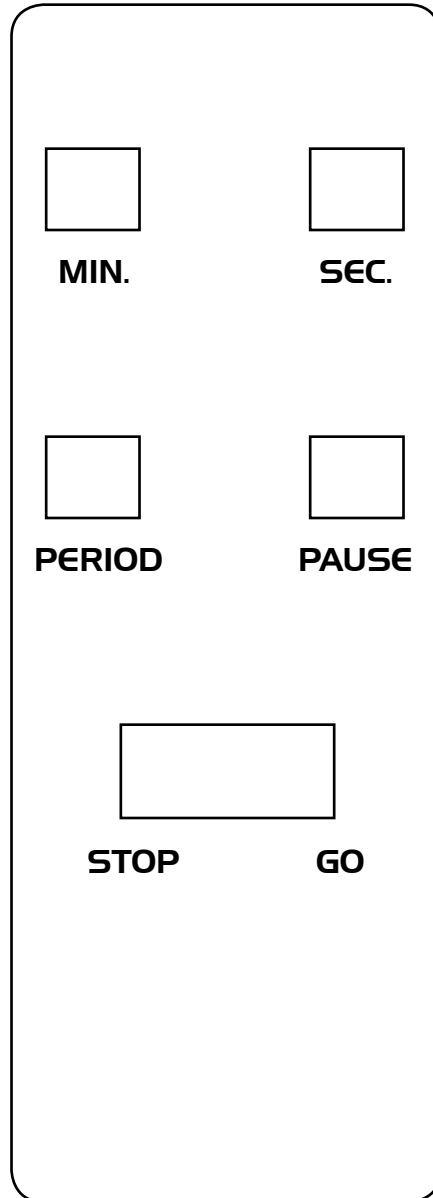

9382A Wireless Control Console

<input type="text"/>	
<input type="text"/>	<input type="text"/>
MIN.	SEC.
<input type="text"/>	<input type="text"/>
PERIOD	PAUSE
<input type="text"/>	
STOP	GO

Battery Operation: (12-volt DC) Optional:

1. Plug in console connector to the 12-pin connector on the scoreboard.
2. Attach Eversan's special battery connector to the 4-pin connector on the side of the scoreboard.
3. Connect the cigarette lighter plug into the Eversan battery pack or a car cigarette lighter.

Charging

The Battery should be charged after each use. Insert the cigarette lighter type plug of the charger into the receptacle on the side of the battery pack. Plug the charger into any standard 120volt household plug. Depending on the amount of drain on the battery, the following is a guide for recharging time. A 25% discharge requires 4 hours recharging. A 50% discharge requires 8 hours. A 100% discharge requires 14 hours recharging time.

NOTE:

The Battery should NOT be left in the Recharging mode for more than 24 hours as this can damage the cell.

CAUTION:

DO NOT attempt to charge this battery pack on currents other than 60-cycles 110volt/120volt AC current. Do not attempt to use the battery during charging.

Care of Battery Pack

Under no circumstances should the battery pack be punctured or disassembled in any way. NEVER insert anything into the battery receptacle except a standard cigarette lighter type plug. The battery pack should always be stored in a fully charged condition and in a cool, dry place. When stored for a long period of time, the battery should be charged before use.



www.eversan.com

**MODEL 9382A
ALL SPORT
INTERVAL TIMER**

Address: 34 Main Street, Whitesboro, NY 13492

Phone: 315-736-3967 • **Toll Free:** 800-383-6060 • **Fax:** 315-736-4058

SCOREBOARDS • TIMERS • MESSAGE SIGNS • VIDEO DISPLAYS • WIRELESS